




Thermal AntiFog - Lens Insert (AntiFog Safety Goggles - Large)

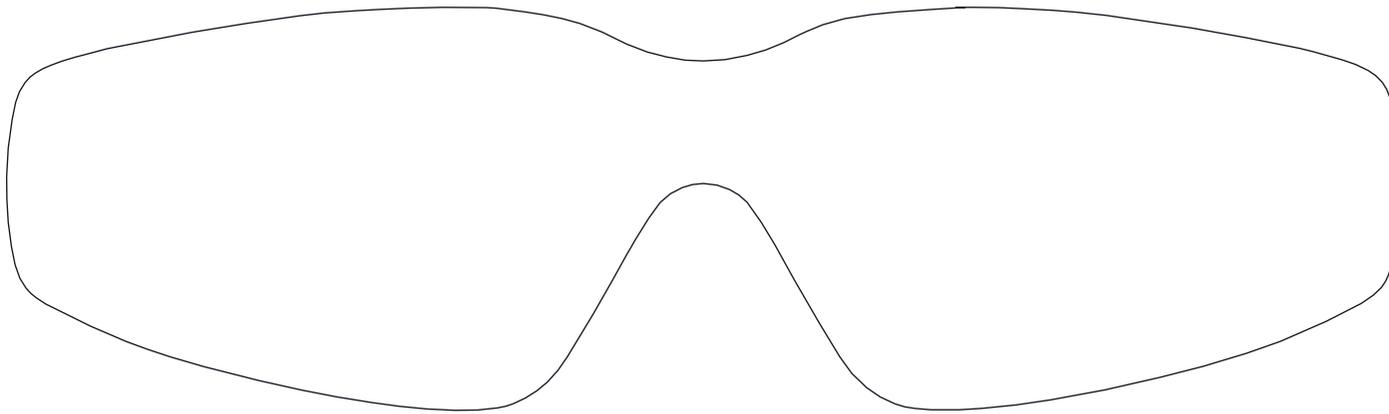


To ensure your printed blueprint is actual size, measure these reference dimensions on your printout to check that the scale is correct.

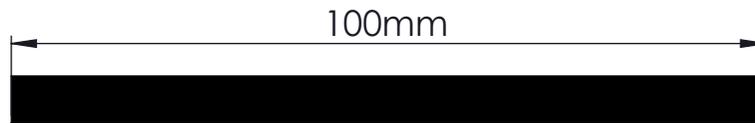


Thermal AntiFog - Lens Insert (Prescription Glasses Compatible Goggles)

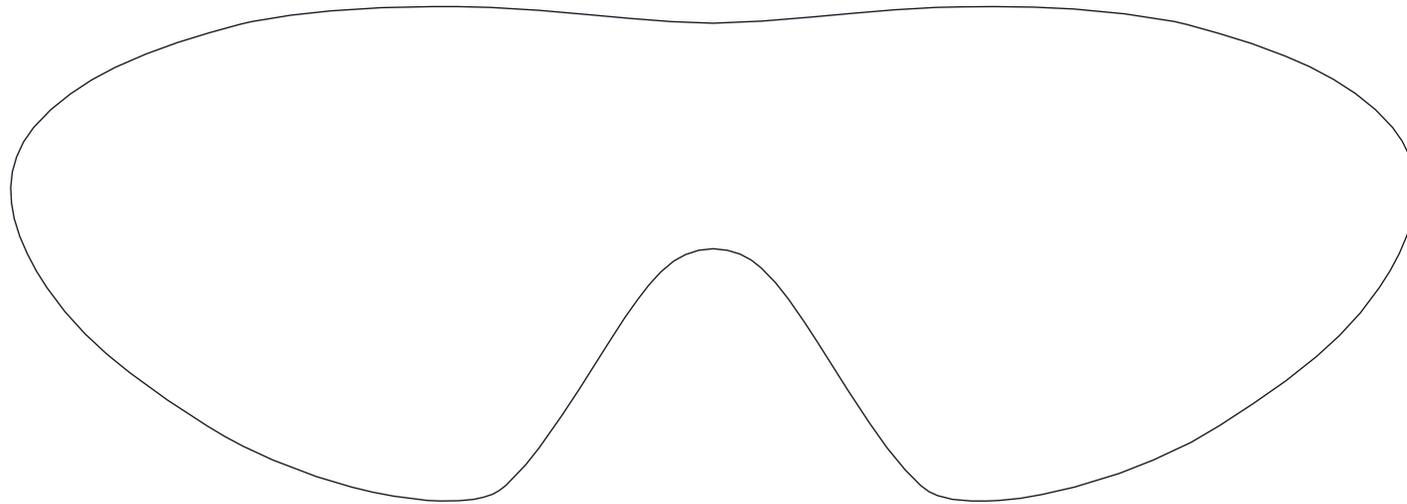

To ensure your printed blueprint is actual size, measure these reference dimensions on your printout to check that the scale is correct.

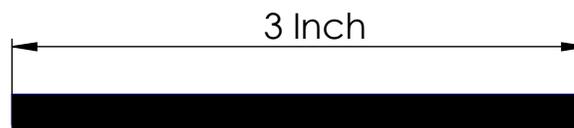


Thermal AntiFog - Lens Insert (AntiFog Safety Goggles – Low Profile)

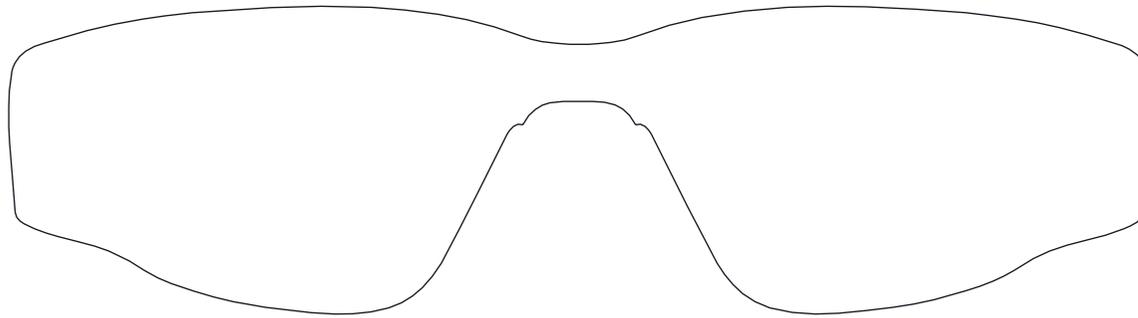


To ensure your printed blueprint is actual size, measure these reference dimensions on your printout to check that the scale is correct.




Thermal AntiFog - Lens Insert (Ballistic Glasses Set)

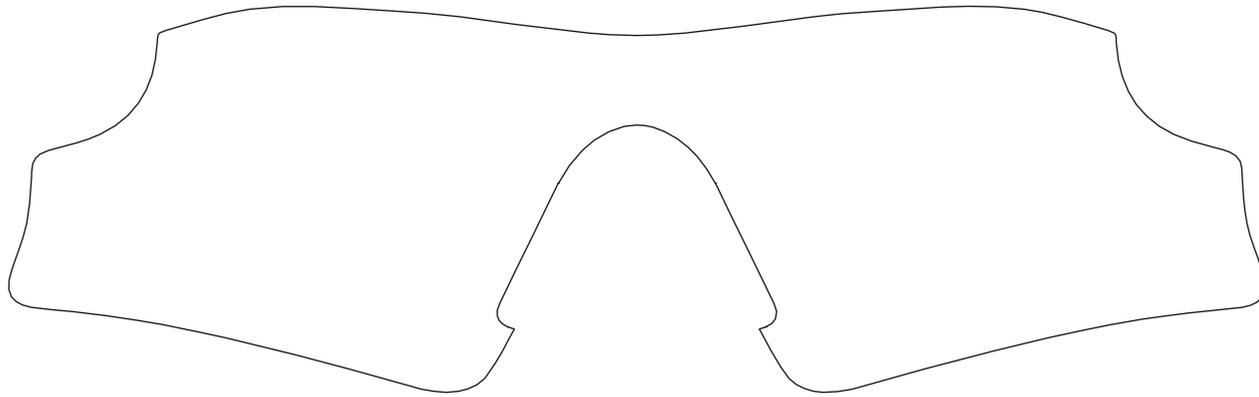


To ensure your printed blueprint is actual size, measure these reference dimensions on your printout to check that the scale is correct.

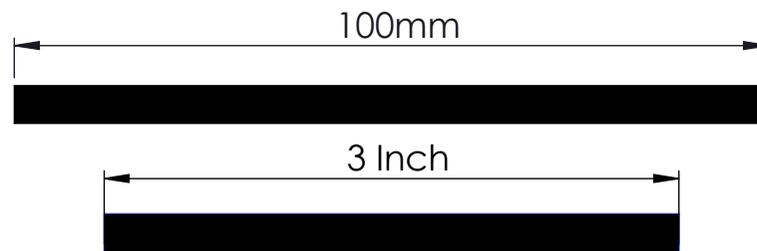


Thermal AntiFog - Lens Insert (Bolle X800)

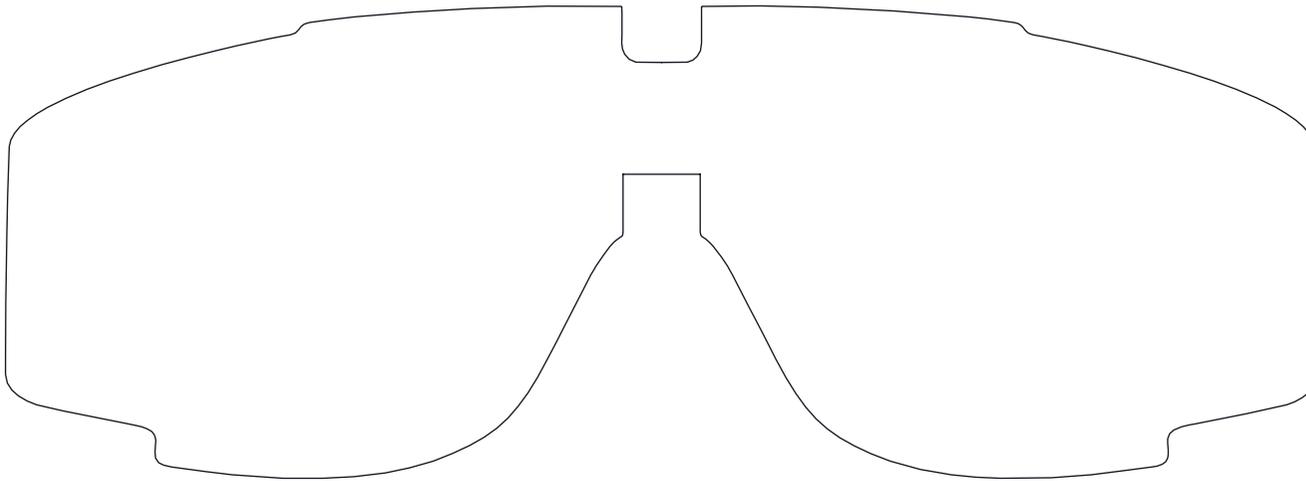

To ensure your printed blueprint is actual size, measure these reference dimensions on your printout to check that the scale is correct.

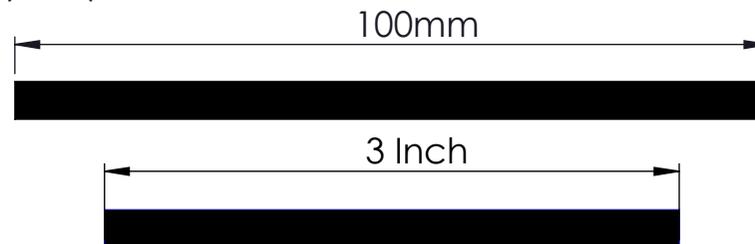

Thermal AntiFog - Lens Insert (Safety Glasses)

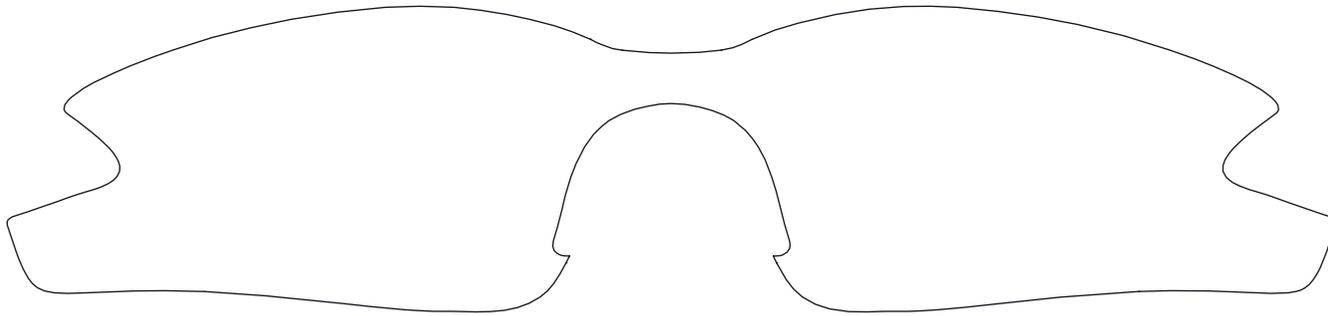

To ensure your printed blueprint is actual size, measure these reference dimensions on your printout to check that the scale is correct.

